

Device Spacer Configuration



XC6P-BASIC Spacer
For XCover6 Pro



XC5-BASIC Spacer
For XCover 5



XC6P-SC Spacer
For XCover6 Pro
with Samsung Case



XC6P-SC-EXTBAT Spacer
For XCover6 Pro with
Smartcase + Smartcase
Extended Battery Pack



SKX6P-BOOT Spacer
For SKX6Pro
with Protective Boot



SKX6P-INSERT Spacer
For SKX6Pro
without Protective Boot

Battery Spacer Configuration



BAT-XC6P Spacer
For XCover6 Pro
Genuine Spare Battery




BAT-SKX Spacer
For SKX6Pro
2,000mAh Extended Battery



116 Village Blvd, Ste 305, Princeton, NJ 08540
P +1 609-256-4700 | F +1 609-228-4373
info@koamtac.com | www.koamtac.com




XCover6 Pro/SKX6Pro/XCover 5
Charging Cradle Spacer Mini Guide

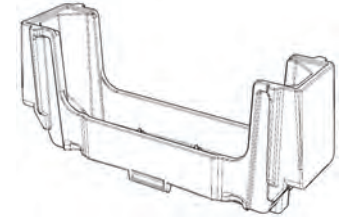

* All pictures shown are for illustration purpose only.
Actual product may vary.

Installing Device Spacers


Install the spacer by holding it outward and pressing it down.
Or, press the top of the spacer until you hear a click. (A)

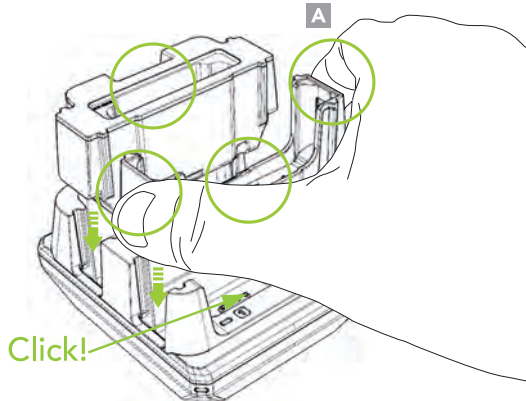

Removing Device Spacers

2-Slot Cradles: Remove the spacer by gripping the
spacer on the outsides and lifting it up. (C)


10-Slot Cradles: Put your finger inside and against the side
of the spacer, then lift the spacer out of the cradle. (B)

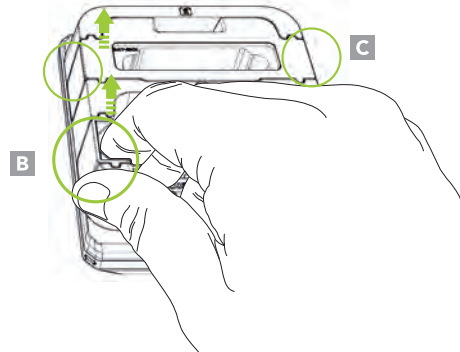

Removing Battery Spacers

2-Slot & 10-Slot Cradles: Remove the spacer by placing
your finger in the hole near the back of the battery spacer
and lift the spacer out of the cradle. (D)

2-Slot Cradles: Remove the spacer by gripping the spacer
on the outsides and lifting it up. (E)

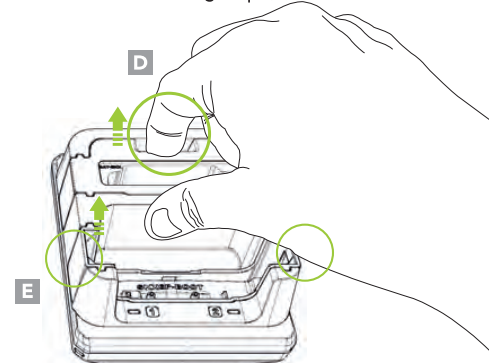

Cradle View with Spacers Installed

