



What's in the Box?

- 1 x 1-Slot Charging Base
- 1 x Charging Cradle + Car/Forklift Mount
- 1 x USB Type-C Cable or Car Power Adaptor
- 1 x Car/Forklift Mini Guide

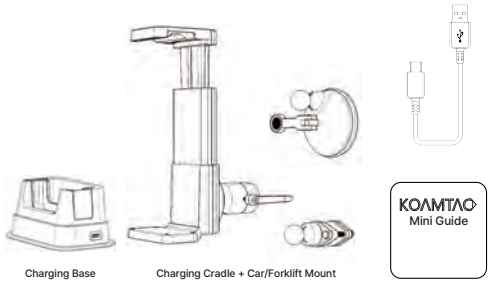

Device Installation (Charging Case)

1. Attach the mount to the Charging Cradle with screws, as shown below.
2. Split lock and align the 3 holes of the mount to the 3 guide poles of Car/Forklift Charging Cradle.
3. Insert and tighten all 4 screws to affix the mount to the cradle.

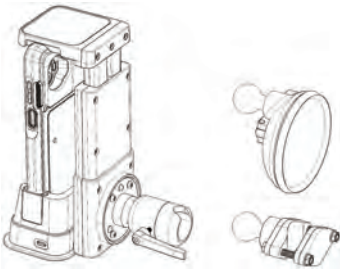

Visit our [website](https://www.koamtac.com) for more information



100 Village Blvd Ste 300 Princeton, NJ 08540
+1 609-256-4700 [p](mailto:info@koamtac.com) | +1 609-228-4373 [f](https://www.koamtac.com)
info@koamtac.com | www.koamtac.com




Car/Forklift Charging Cradle

Mini Guide




Inserting Your Device

1. Lift top cover of the Car/Forklift Charging Cradle upward and insert the bottom of the device into the charging cradle. (A)
2. Adjust top cover of the Car/Forklift Charging Cradle to securely hold the top of the device. The top cover will slide downward gripping the device. (B)

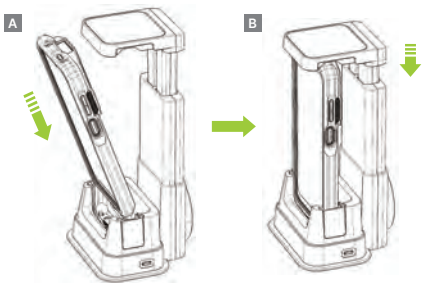


Removing Your Device

1. Lift top cover of the Car/Forklift Charging Cradle upward and slide the device outward while pulling it out from the charging cradle. (C)

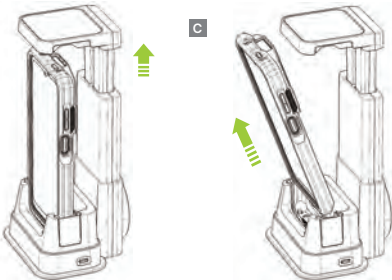

Charging Your Device


Plug the USB-C cable from Car Power Adaptor into USB-C port on the side of the charging base. (D,E)

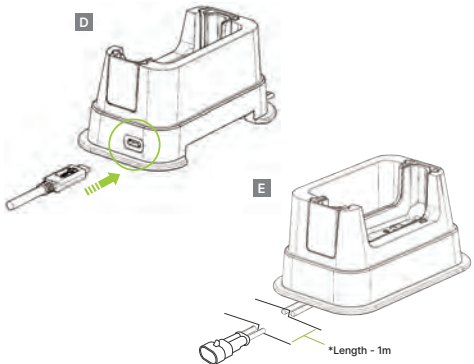

Charging Status LED

When the device is charging.

- Green: Fully Charged
- Orange: Charging
- Red: Low Battery

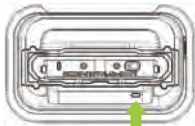

Status LED

When device is in use and in cradle.

- Blinking Green: Fully Charged
- Blinking Orange: Discharging
- Blinking Red: Low Battery